GENERAL INF ORMATION

PROGRAMMING THE TIMER#1

↑ DANGER ↑

■ Technical Data

- Operation Voltage:220-240VAC
- Frequency:50/60Hz
- AC switching capacity:16A/250VAC*
- Inductive Load:5A
- Ambient Temperature:-10°C ~+20°C
- Accuracy:Type+-1s/day at+20°C

- · Battery Backup: 60 days
- Minimum Programmable time: 1 Minute
- Maximum Programmable time: 168 Hours
- Maximum Programmes: 170N+170FF
- Max Cable Size:6mm²

Operation Instruction

Programming Setting

Serial	Key	Programming
1	Press P once	Setting Channel (17 times ON/OFF setting are option)
2	Press D+	Selectdays of week (if you want same set in every day, need not press this key)
3	Press H+	Setting Hours
4	Press M+	Setting Minutes
5	Press 🖰	Setting Normal Display time
6	Press Manual	Setting PermanentON PermanentOFF Auto(AUTO), Please see diagram 1
7	Press Reset	Reset Timer (delete programming errors)

Setting Instructions:

Step 1. Restore Factory Setting

Press button <Reset> on timer before setting the program you require.(refer diagram 1)

Step 2. Setting Current Time on Timer

Press and hold button < > on timer to set day by pressing D+(day), H+(hour), M+(minute) (refer diagram 2)

Step 3. Programme Setting

Press the button <P> on timer once follow by pressing D+(day), H+(hour), M+(Minute) to set the desired working programm and repeat the same step (for ON/OFF and multiple programming)-(refer diagram 3)

3.1) press button <P> once =ON programming. Setting of Day/Hour/Minutes press D+,H+,M+

3.2) press button <P> once again = OFF programming. Setting of Day/Hour/Minutes press D+,H+,M+

• Setting D+, there are 15 kinds of different combination for week setting. such as:

Diagram 3

MO/TU/WE/TH/FR/SA/SU (each setting for each single day) MO TU WE TH FR SA SU (from Monday to Sunday) MO TU WE TH FR SA

MO TU WE TH FR SA SU

MO WE FR TU TH SA MO TU WE

TU FR SA Setting H+, From 1 to 24 for hours setting 1, 2, 3, 4.....24 Hours


 Setting M+, From 1 to 60 for Minutes setting 01, 02, 03, 04.....60 Minutes

3.3) repeat above for program setting 2.....17

Step 4. Exit to Clock

To exit to normal display time press < 🖰 > once



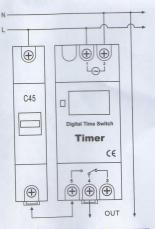



 
 
 


Diagram 2 H+ RESE





 


Diagram 4